

Product function introduction

Bathtub TV

TV-15series

A0

Please read this manual before
using and installing

极速图片转 PDF 工具


未注册版

一次注册， 终身使用

（注册后将不再有此页出现）

The remote control battery replacement method

- * The remote control face down, the battery cover counterclockwise rotation refers to the open department can open.
- * Load a ？ 20 * 3.2 (Model: 2032) button batteries. Ensure the positive battery when the battery (+) and negative (-) and positive (+) and negative remote control (-) consistent.。
- * After loading the battery, the battery cover clockwise to CLOSE place that can be turned off。

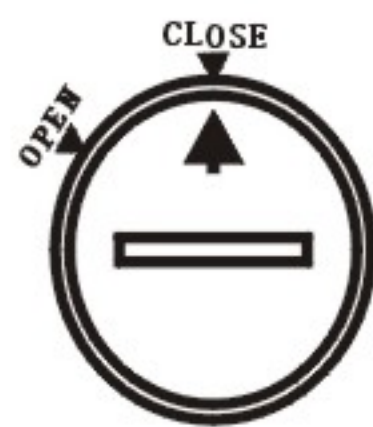

Special instructions

- * If the remote control operation is not normal, unstable, or can't remote control the TV, do the following check: whether to turn on the TV power supply, whether the positive and negative battery is installed backwards, whether the battery is exhausted;
- *If long time don't use the remote control or battery power, please take out the battery. (used batteries will pollute the environment, properly handle, please.)
- *Remote control distance: within the scope of 5 meters in front of remote distance effectively.
- *Remote control Angle: the power light place for TV infrared receiving window, from the Angle of its controlled within 5 meters around the direction is not inferior to 30 degrees, vertical direction of the up and down is not inferior to 15 degrees.

Trouble shooting guide

Before to repair, please check the table below, and see if I can find the cause of the problem you encountered. When are you sure you completely according to the manual operation, still cannot be ruled out after failure, you can consider to repair.

Can't boot up	1、 Check whether the TV's power indicator light is bright, no light power failure. 2、 Check you have not in standby mode. 3、 Check whether the remote control is working properly.
Normal picture but no volume	1、 Check whether the TV volume Settings in the smallest state。 2、 Check whether the TV set to mute state。 3、 Check whether the TV audio output line connected。
Normal volume but no picture	1、 Check the TV screen brightness and contrast Settings。
No picture or image in black and white	1、 Check the TV image setup options 。 2、 Check the color standard。
No channel on TV state or grainy snowflakes, image distortion	1、 Into the menu,option TV set up, automatic searching option then search the channel again. 2、 Check the TV antenna, location and connection. 3、 Adjust the direction of antenna or set the channel or fine tune again.
Sound and image interferenceor horizontal/vertical stripes/image dithering	1、 Find the impact of TV appliances, and away from the TV. 2、 To check whether there is interference sources nearby, such as electric or power tools.
The remote control function failure	1. Remote control battery have no power or battery positive and negative are wrong installed. 2. Between the TV and the remote control is not obstruction, or beyond remote distance.

Warming

- 1.This product has high pressure, users are not allowed to open the cabinet, so as to avoid electric shock accidents.
- 2.The power of the supply of this product to meet the product rated voltage,frequency and other parameters.
- 3.Non-professional maintenance staff are not allowed to repair and replacement parts may cause electric shock, fire and other accidents.

Notice

1. With a clean, soft cotton cloth to clean the machine maintenance, prohibit repeatedly forced to wipe.
2. Scribing ban with a hard object, beat, collision, or with a variety of abrasive items to friction display is not allowed.
3. Still image may cause permanent damage to the TV screen, do not display on the LCD TV screen still images over two hours. Because this will cause the screen image blur, in order to avoid this problem, you reduce the brightness contrast of the screen when displaying a still image.
4. Encountered bad weather thunderstorm, you should unplug the power cord and cable quickly (outdoor receiving antenna) plug to avoid lightning damage.

Usage notice

1. Please unplug or disconnect the power supply,if you do not use this product for a long time.
2. In order to extend the using life of the product,please do not too often switch machines.the switch time interval in more than 30 seconds is best.
3. Without affecting the viewing quality of the premise,you can reduce the brightness of the display to reduce TV energy consumption during use, and extend the life of the LCD screen.
4. Please read before using this product features manual so that you master the correct method of operation. When you read the instructions, you should keep for future use.

Product features

- * High quality LED backlit display
Has a gorgeous, energy-saving, environmental protection and other advantages.
- * Digital display
Perfect reproduction of the whole picture real, no edge blurring and nonlinear distortion phenomena; not affect the magnetic field.
- * Variety of quality improvement circuit
Colorful optimization function; Motion pictures and static quality improved circuit.
- * Digital multimedia broadcasting functions
Can read the USB2.0 standard equipment, browse pictures and listen to music, enjoy the video alone.
- * Memory system automatically searches
With the function of automatic search, it can store 200 channels; Adopting digital frequency synthesis high-frequency head.
- * Power saving protected mode
When there is no input signal, after 15 minutes, the unit automatically enters a low-power standby mode, it can effectively extend the service life of the machine,and save energy.
- * Multimedia port
This machine having an outdoor receiving antenna, VGA, video, USB and other ports.

Technical specifications


Type	TV-B15	TV-H15	TV-D15	TV-L15
Product name	Gantry hanging TV (white)	Gantry hanging TV (black)	Single arm hanging TV(white,black)	Vertical TV (white,black)
Display visual image diagonal dimension	15.6inch(16:9)	15.6inch(16:9)	15.6inch(16:9)	15.6inch(16:9)
Display resolution	1366*RGB*768	1366*RGB*768	1366*RGB*768	1366*RGB*768
Rfstandard	PAL (D/K、L、B/G) NTSC (M)	PAL (D/K、L、B/G) NTSC (M)	PAL (D/K、L、B/G) NTSC (M)	PAL (D/K、L、B/G) NTSC (M)
Video standard	PAL、NTSC	PAL、NTSC	PAL、NTSC	PAL、NTSC
Rated input voltage and frequency	AC100-240V 50HZ/60HZ	AC100-240V 50HZ/60HZ	AC100-240V 50HZ/60HZ	AC100-240V 50HZ/60HZ
Standard	Q/0202RSR 511-2011			

Special instructions


- * Instructions' pictures and illustrate are as a reference ,please remote the real appearance in kind shall prevail.
- *It doesn't noticed when the product's upgrade ,appearance design and use have been changed.

Product installation and connection

- * To install the fit bathtub TV,the minimum space is 540MM*420MM*60MM。
- Gantry open two hole in the bathtub edge (Φ20MM) 。 Note: vertical and single arm open one hole。

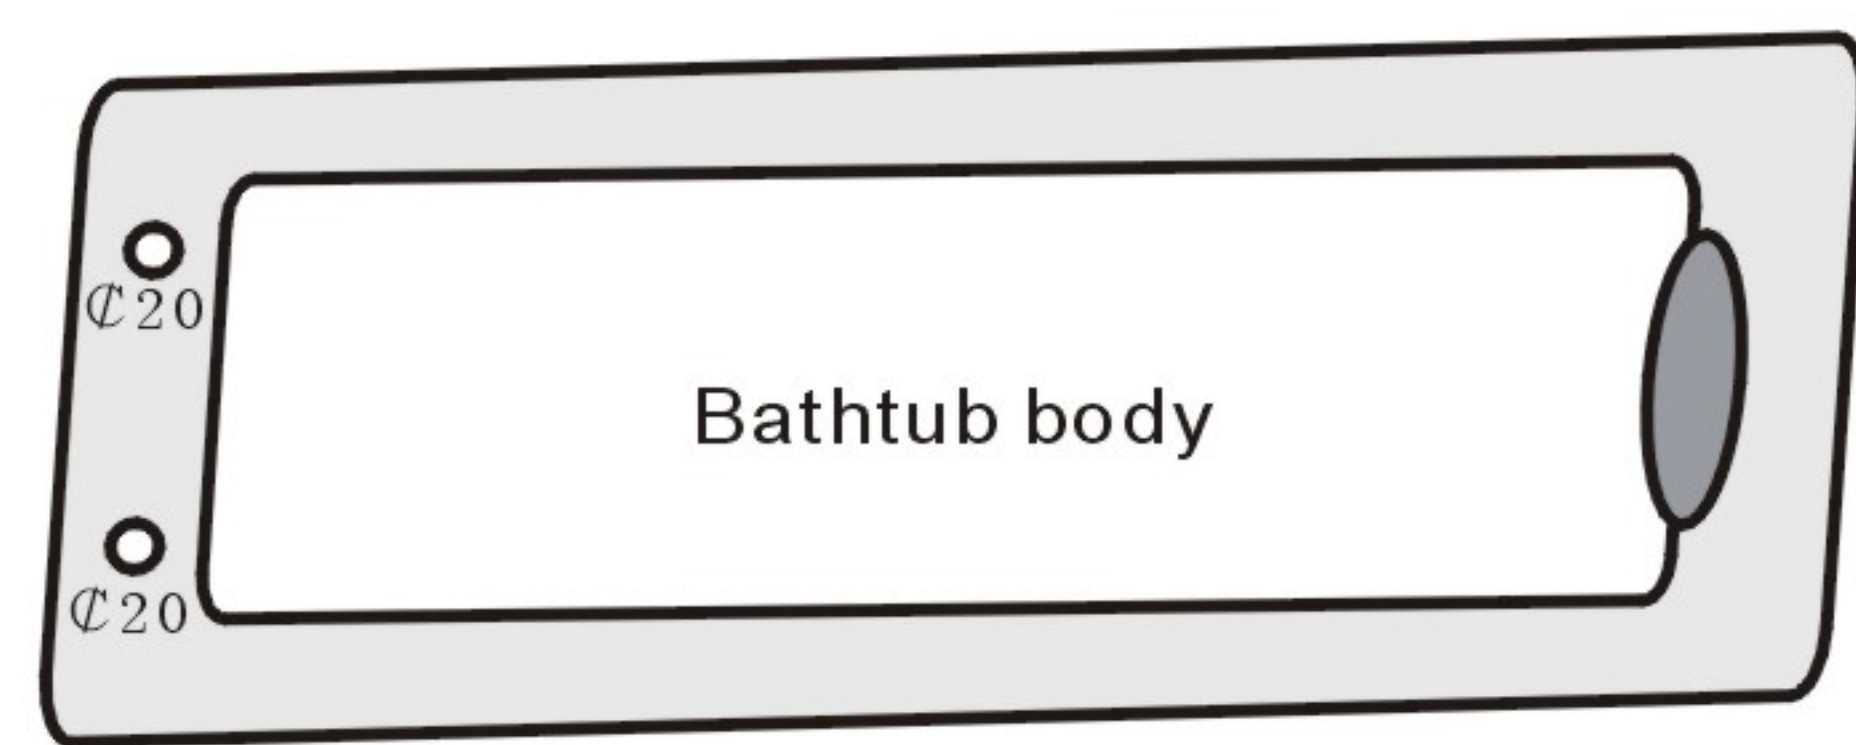


- * Install gantry TV to bathtub respectively after open holes, according to the corresponding identity, contact the signal line, control switch, audio device and horn wire after finish install, the use of electricity after confirmed.

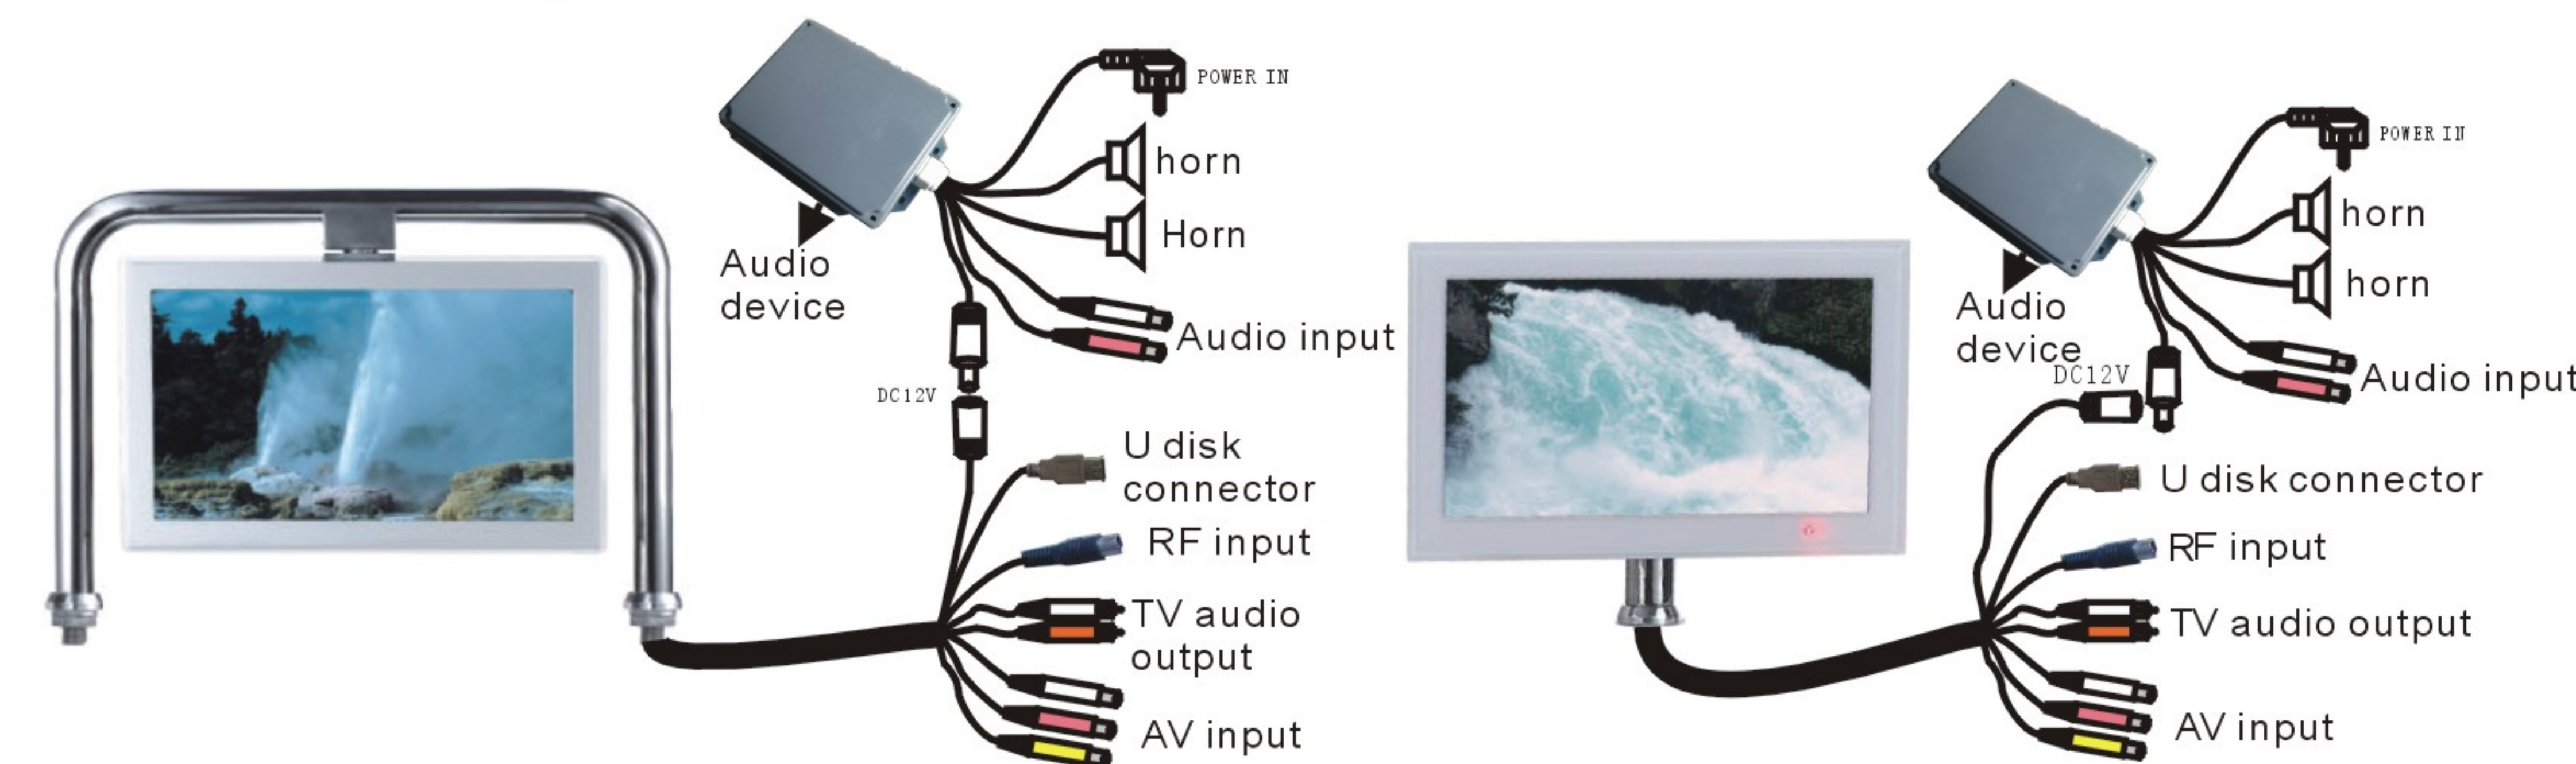

Remote control instructions

Note: remote control appearance in kind shall prevail

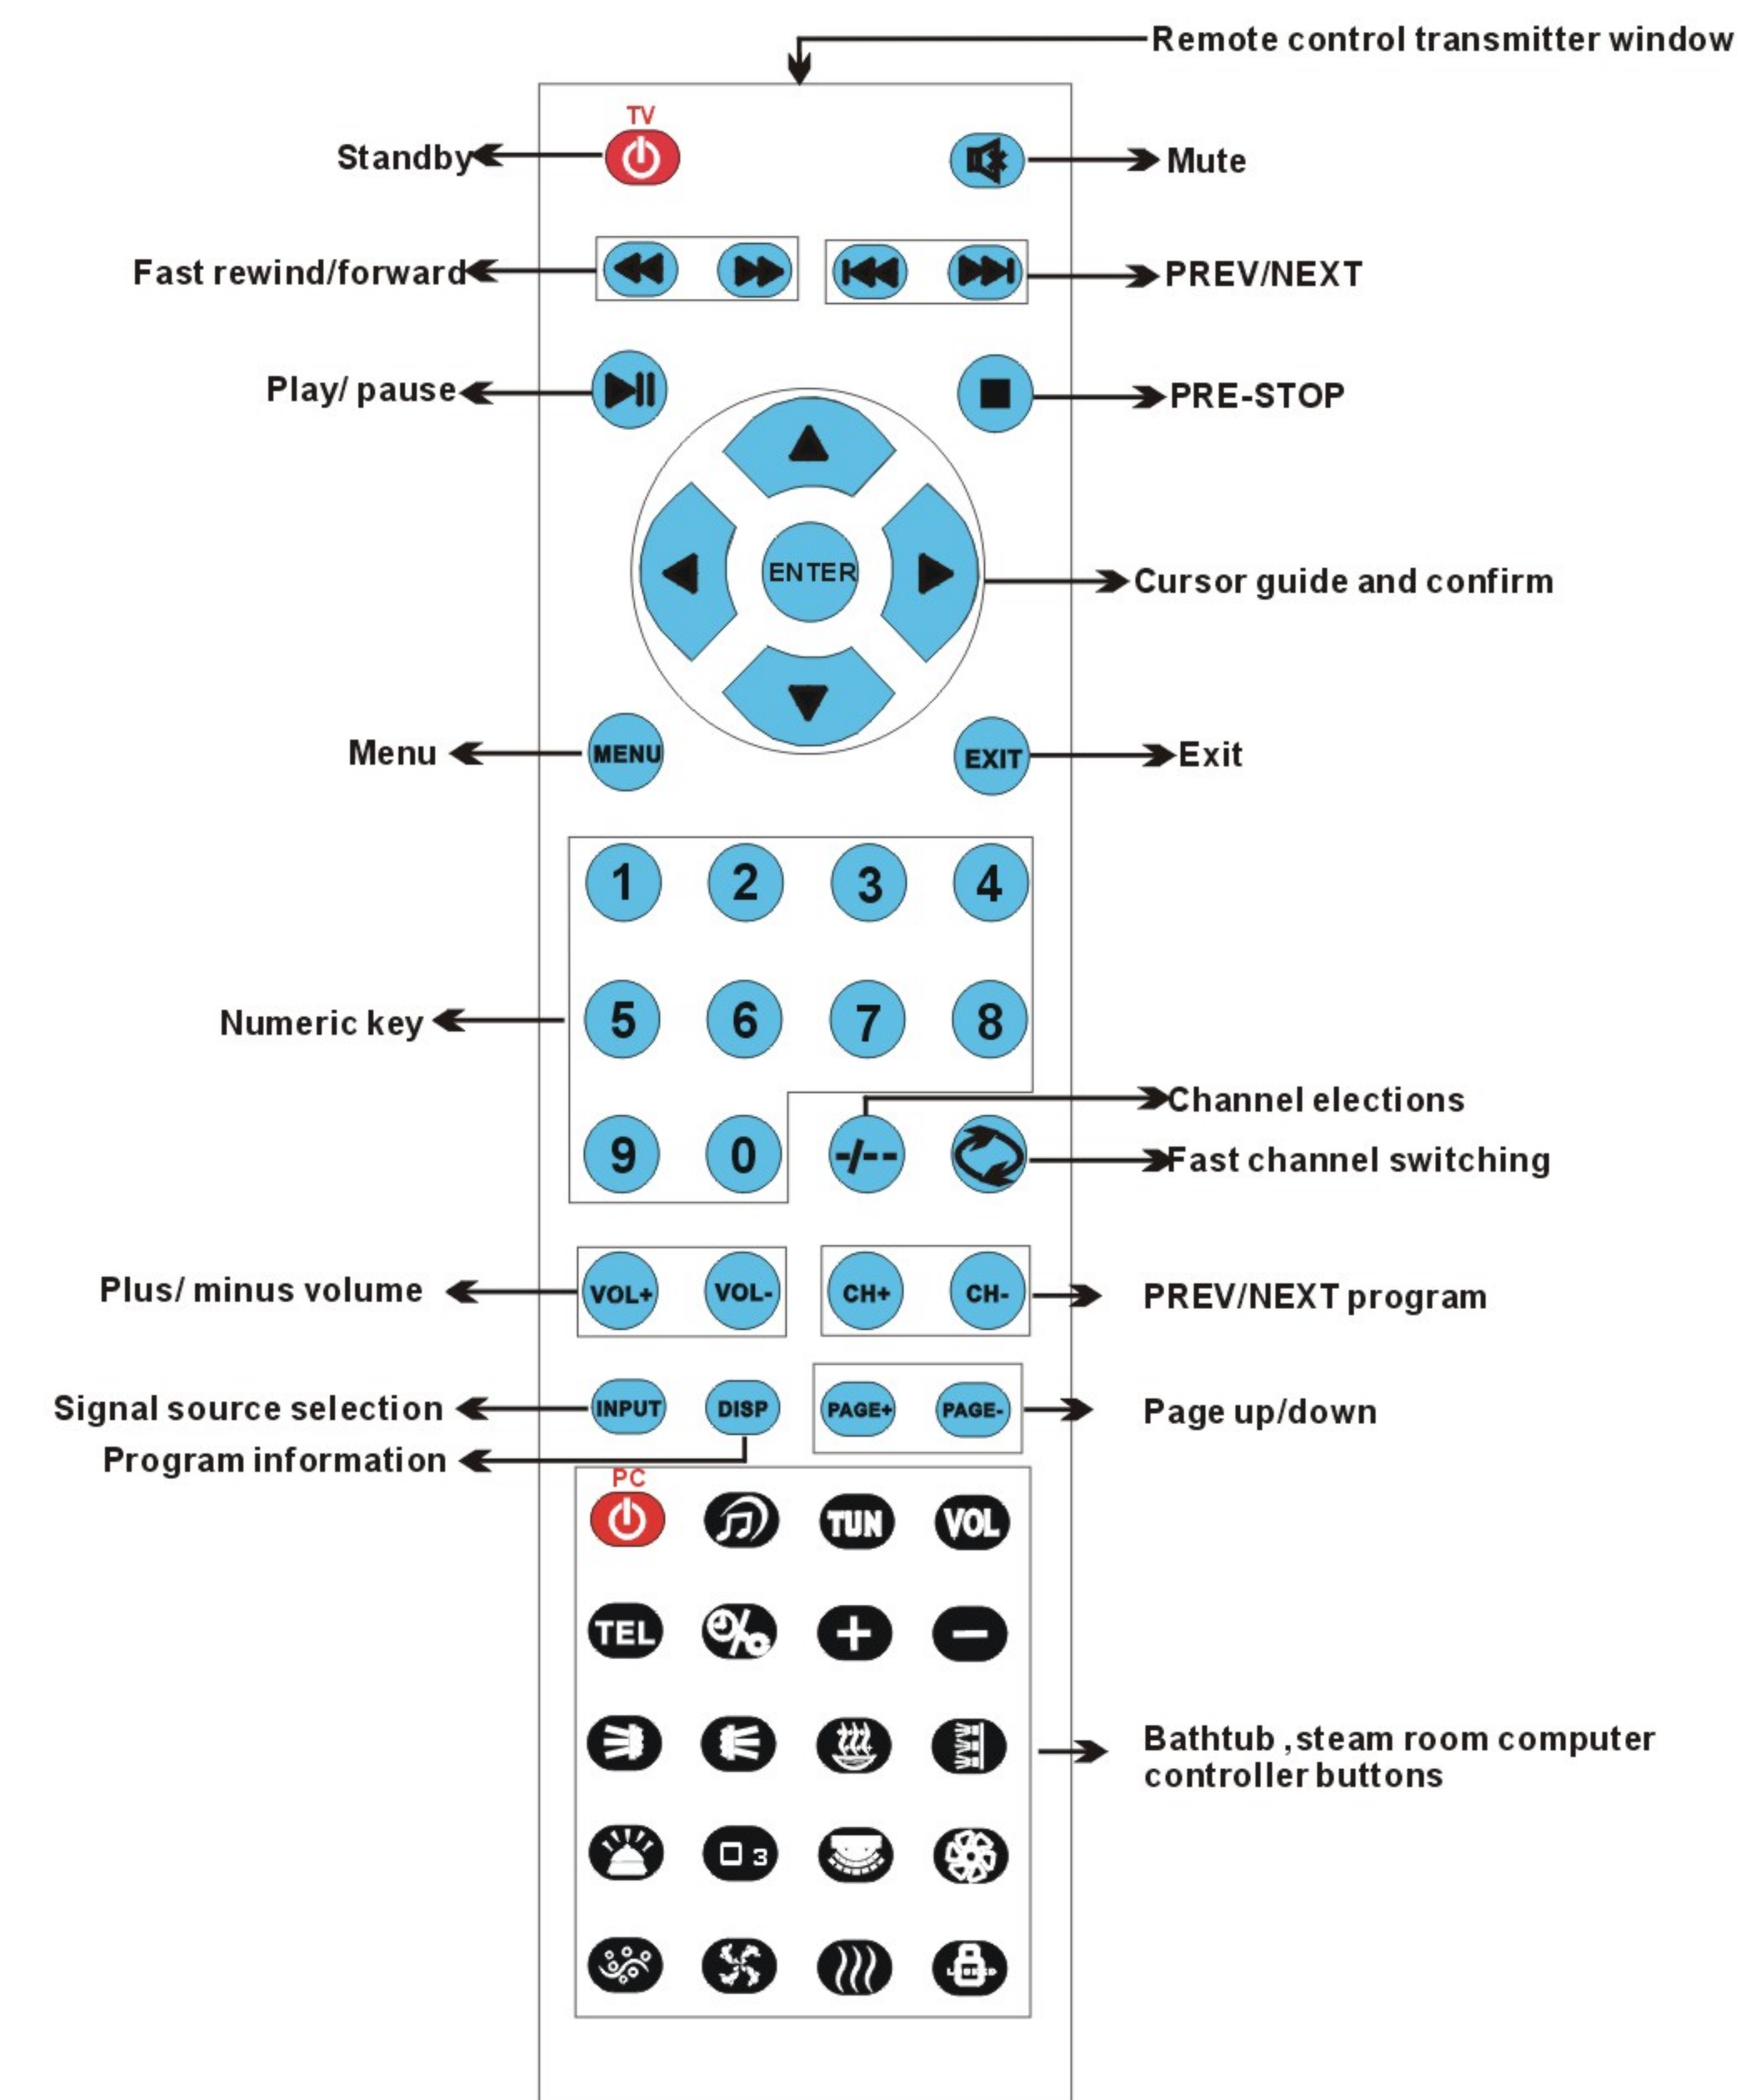

TV keys function

Key	Function	Key	Function
	Standby/ on switch		Eliminate the sound output/ unmute press again
	Fast rewind/ forward		PREV/ NEXT
	Play/ pause		PRE-stop
	Cursor orientation		Confirm selected/ select settings
	On/ off menu		Exit
	0-9 numeric key channel selection		Press to enter the channel number into the corresponding channel
	To quickly switch the current channel and memory channel		Plus/ minus volume
	PREV/ NEXT program change		Page up/ down change
	Signal source selection (such as TV、 AV、 USB multimedia)		Program information display